






X-ASR

4TH GEN. MOSFET

GATEE.EU/X-ASR

LED	POSSIBLE REASON	WHAT TO DO
 1s on start	Self-test completed without error	Enjoy airsofting
 BLINKING	1. Motor is not connected 2. Brushes are worn out	1. Check wiring and motor connectors 2. Replace brushes
 BLINKING ALTERNATELY	Trigger wire connected to negative motor wire	Check installation instruction or contact us at support@gatee.eu
 ON	1. Battery is discharged 2. Short-circuit 3. Trigger was pulled while connecting the battery	1. Charge battery 2. Check wiring and motor 3. Release the trigger, check trigger contacts
 BLINKING	Overload - temperature too high, X-ASR is designed for M120 spring	Use high-torque motor and gears or replace mosfet with stronger model